

HOME DECORATORS COLLECTION

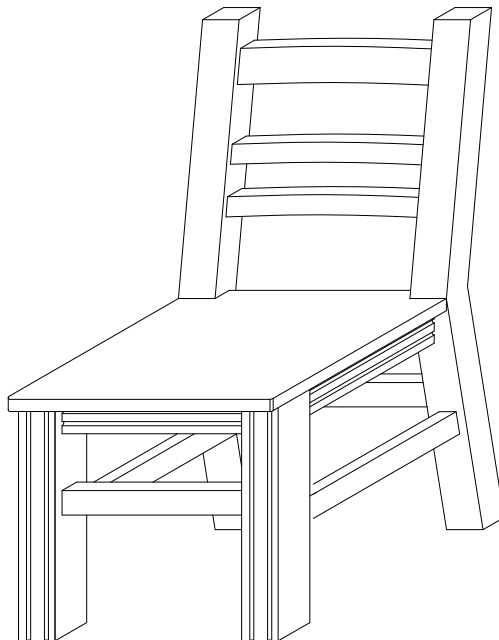
BF-25134 KIDS STOOL 26"HX13"W

INV#16269

ASSEMBLY INSTRUCTIONS


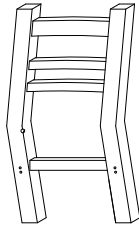






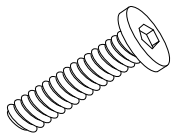
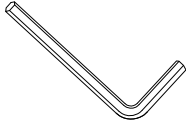


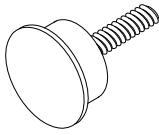
Made In China

THIS ITEM MUST BE ASSEMBLED BY AN ADULT




Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.


IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST			
A  TOP FRAME-1PC	B  BACK FRAME-1PC	C  LEFT FOOT-1PC	
D  RIGHT FOOT-1PC	E  LEFT PANEL-1PC	E1  RIGHT PANEL-1PC	
F  FRONT PANEL-1PC	G  WASHERS-4PCS	H 11mm × 2"  BOLTS-4PCS	
I  ALLEN WRENCH-1PC	J 8mm × 1-1/4"  SCREWS-6PCS	K  DOWELS-6PCS	L  FEET-4PCS

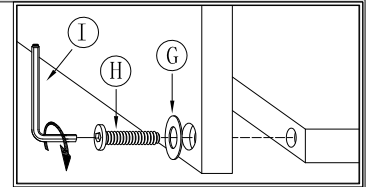NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.




HOW TO USE THE ALLEN WRENCH

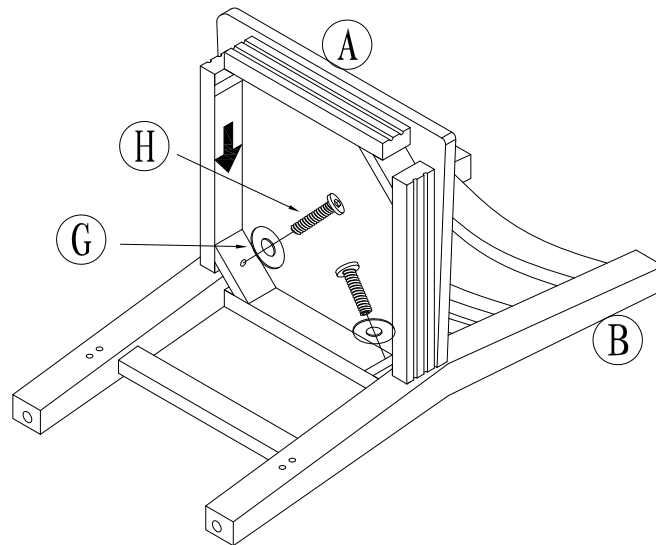


1). ASSEMBLE THE BACK FRAME(B).

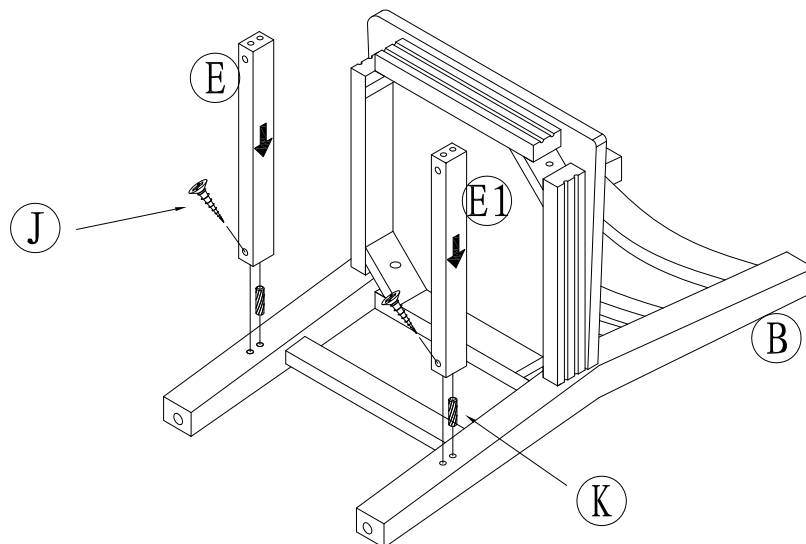- ATTACH THE TOP FRAME(A) TO BACK FRAME(B) USING 2 BOLTS(H) AND 2 WASHERS(G).




2). ASSEMBLE THE PANEL(E/E1).

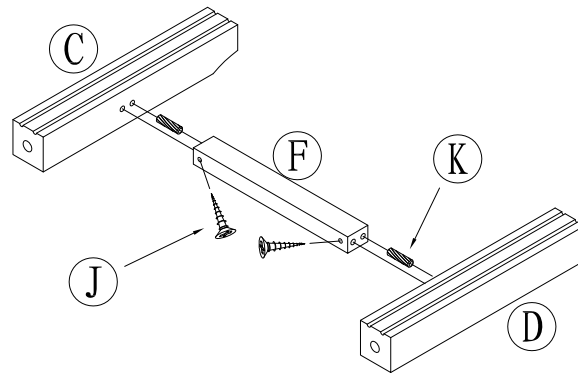- INSERT 2 DOWELS(K) INTO THE HOLES IN THE BACK FRAME(B).
- ATTACH THE PANEL(E/E1) TO BACK FRAME(B) USING 2 SCREWS(J).




3). ASSEMBLE THE FRONT PANEL(F).

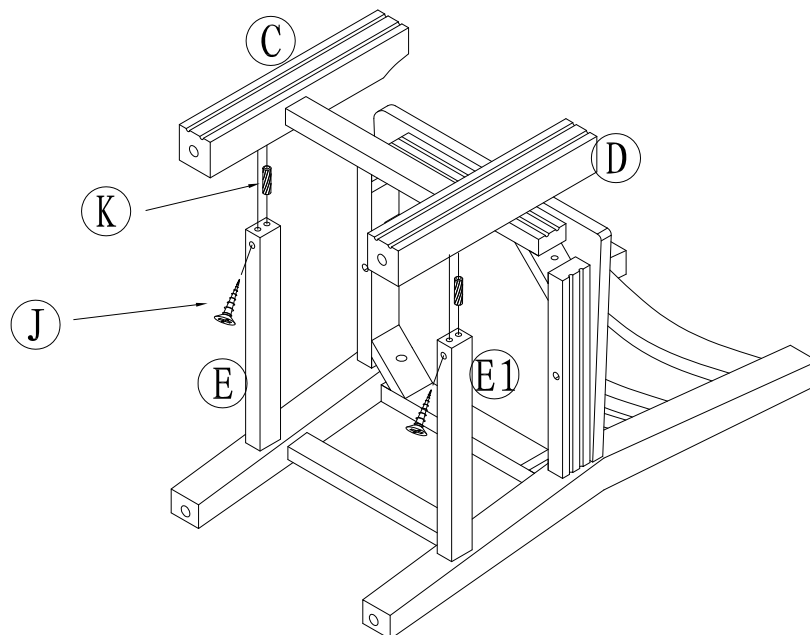- INSERT 2 DOWELS(K) INTO THE HOLES IN THE FRONT PANEL(F).
- ATTACH THE FOOT(C/D) TO FRONT PANEL(F) USING 2 SCREWS(J).




4). ASSEMBLE THE FOOT(C/D).

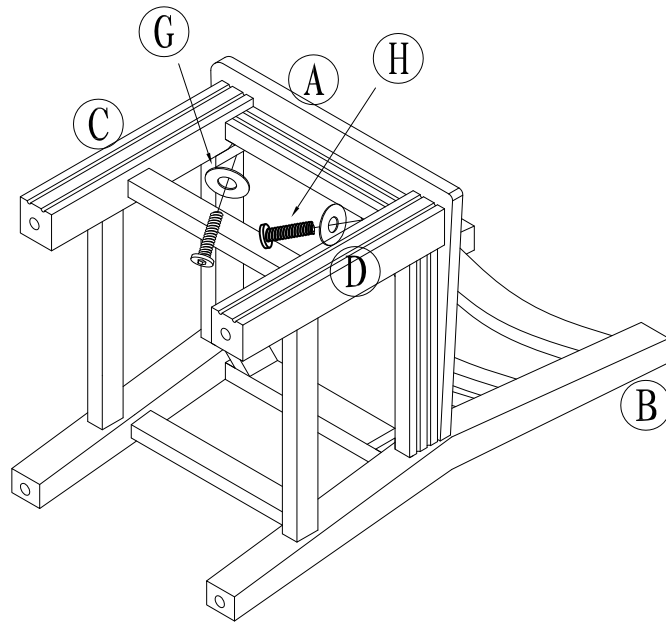- INSERT 2 DOWELS(K) INTO THE HOLES IN THE PANELS(E).
- ATTACH THE FOOT(C/D) TO PANEL(E/E1) USING 2 SCREWS(J).



5). ASSEMBLE THE FOOT(C/D).

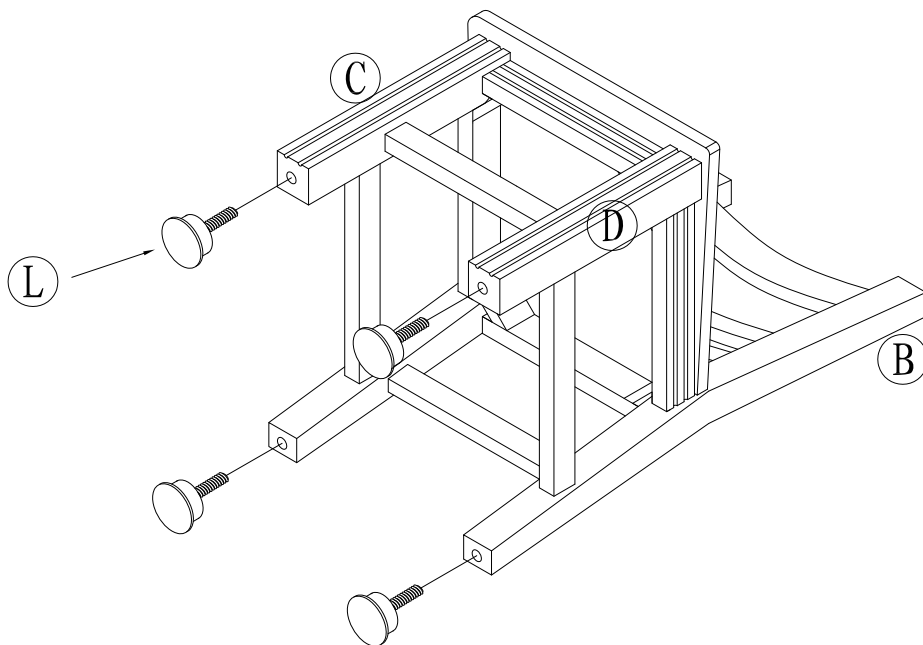- ATTACH THE FOOT(C/D) TO TOP FRAME(A) USING 2 BOLTS(H) AND 2 WASHERS(G).



6). ASSEMBLE THE FEET(L).

- ROTATE THE FEET(L) INTO THE HOLES IN THE PANEL(B/C/D).